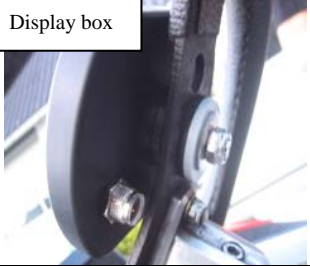

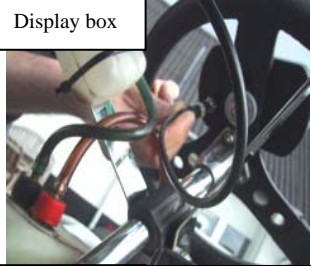

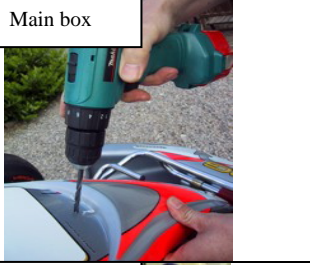
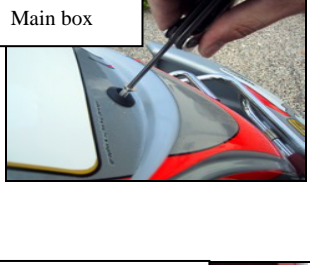

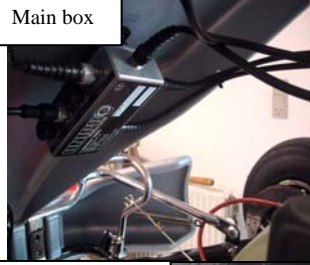
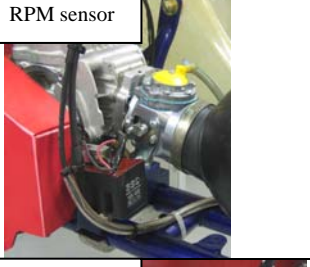






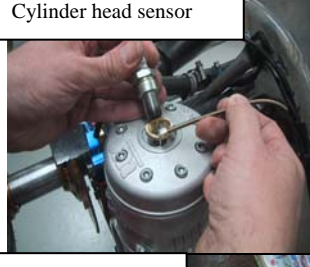
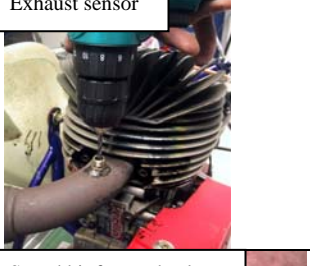
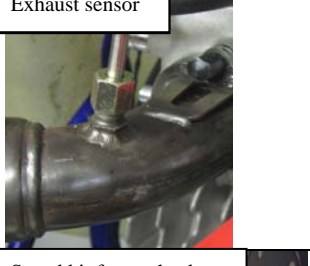
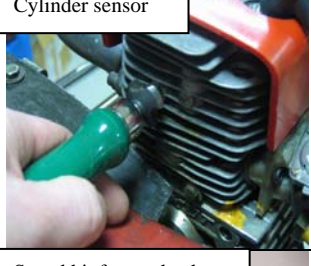
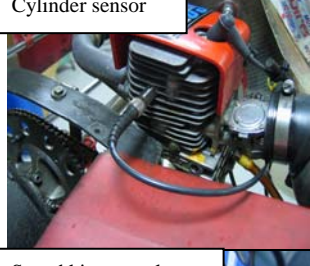

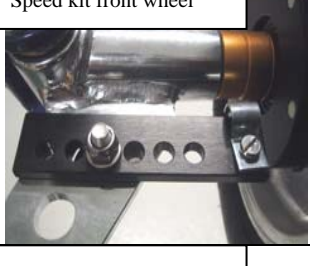





# Functional overview Unipro 5004 (software version 1.05/1.04)

Download QuickGuide and complete reference manual at [www.uniproLaptimer.com](http://www.uniproLaptimer.com).

ON / OF, SHOW AND DELETE DATA	
<b>On and Off:</b> Push <b>MODE</b> to turn the Laptimer on. Hold <b>MODE</b> down in app. 2 sec. to turn the Laptimer off	
<b>Show data:</b> Push <b>MODE</b> and use <b>▲ ▼</b> to scroll through the laps. Shift between high and low values with <b>SETUP</b>	
<b>Delete data:</b> Turn the Laptimer, then push and hold <b>FUNC</b> until CLEAR LAPS is shown in the display. Push <b>FUNC</b> again to accept the deletion	
<b>Shift between pit mode and driving mode:</b> Turn the Laptimer on and Push <b>MODE</b> to switch between modes	
LAPTIMER SETUP	
<b>Go to Setup:</b> Turn on the Laptimer and push <b>SETUP</b>	<b>Shift between setup functions:</b> push <b>SETUP</b> to scroll.
<b>Engine run time:</b> Push <b>SETUP</b> and the display shows <b>EN X XX</b> Use <b>▲ ▼</b> to scroll through the engine numbers	
<b>Manual change of engine run time:</b> Choose engine number and push <b>FUNC</b> and then <b>▲ ▼</b> to change the run time. Push <b>FUNC</b> to save the changed run time.	
THE METHOD FOR CHANGING AND DELETING SETUP VALUES ARE COMON FOR THE SETUP MENU	
<b>Wheel circumference:</b> Push <b>SETUP</b> until the display shows <b>Circ. 0,XXX</b> Use <b>▲ ▼</b> to set the correct value	
<b>Tire wear counter:</b> Push <b>SETUP</b> until the display shows <b>TIRE X</b> Use <b>▲ ▼</b> to scroll through the tire set numbers	
<b>Temperature warnings:</b> Push <b>SETUP</b> until the display shows <b>POINT 1 X</b> Use <b>▲ ▼</b> to set the warning value. The LED lamp for the chosen input flashes.	
<b>RPM waring:</b> Push <b>SETUP</b> until the display shows <b>rpm Point XX,X</b> Use <b>▲ ▼</b> to set the warning value	
<b>Receiver type:</b> Push <b>SETUP</b> until the display shows <b>LOOP</b> , <b>IR</b> or <b>STRIPE</b> Use <b>▲ ▼</b> to choose receiver type	
<b>Magnet receiver setup:</b> When using a magnet stripe receiver you must set the number of stripes and the number of stripes from the pit to the finish line. Push <b>SETUP</b> until the display shows <b>STRIPE X-X</b> Push <b>FUNC</b> and the display shows <b>STRIPES X</b> Use <b>▲ ▼</b> to chose the number of magnet stripes on the track. Push <b>FUNC</b> again and use <b>▲ ▼</b> to set the number of stripes from the pit to the finish line. Push <b>FUNC</b> to save	
<b>Choose display values:</b> Push <b>SETUP</b> until the display shows <b>SET DISPLAY L</b> Choose the value for the lower left side of the display with <b>▲ ▼</b> Push <b>SETUP</b> until the display shows <b>SET DISPLAY R</b> Choose the value for the lower right side of the display with <b>▲ ▼</b> The values that are not shown in the lower part of the display will be shown in the upper left side of the display. You can shift between values in the upper left side of the display with <b>FUNC</b> both in driving and pit mode	

10.02.2007

<p>Display box</p> 	<p>Display box</p> 	<p>Display box</p> 	<p>Display box</p> 
<p>Main box</p> 	<p>Main box</p> 	<p>Main box</p> 	<p>Main box</p> 
<p>RPM sensor</p> 	<p>Magnetic receiver</p> 	<p>Magnetic receiver</p> 	<p>Loop receiver</p> 
<p>IR receiver</p> 	<p>IR receiver</p> 	<p>Water sensor</p> 	<p>Cylinder head sensor</p> 
<p>Exhaust sensor</p> 	<p>Exhaust sensor</p> 	<p>Cylinder sensor</p> 	<p>Cylinder sensor</p> 
<p>Speed kit front wheel</p> 	<p>Speed kit front wheel</p> 	<p>Speed kit front wheel</p> 	<p>Speed kit rear axle</p> 
<p></p>	<p></p>	<p>Cable mounting</p> 	<p>Cable mounting</p> 