




setup	timer lap	split
023405340131501		
10351343540303051		
1031313035103		
10131351351354666		
43464687167		
176767676871313		
786687138138731		
7167186778		
16871776878167		
871671681		

UniGo IR Box

Before mounting the IR Box, please make sure that:

- UniGo has the right software. Minimum version is **1.38.001**. Software version can be found under the icon UniGo in the Info menu. The latest version will always be available on our homepage www.uniproaptimer.com.
- The IR Box can be mounted under the nose cone or in another place that makes it easy to connect the sensors. All inputs are marked with names/numbers. Please connect the cable from the IR Box to the Flex connector on the backside of UniGo.
- After you have checked/updated UniGo's firmware, you have to set up the Flex connector:
 - Turn on UniGo, go to the Main menu – Setup menu – Sensor setup. Change FLEX CONN. to IR Box. Now the Flex connector is set up to communicate with the IR Box.
- To enable the tire temperatures in the display while driving:
 - The IR Box must be connected to the Flex connector. Turn on UniGo, go to Main menu – Setup menu – UniGo setup. Select SET UP SCREENS and change the data field you want and select TIRE TEMP. Now it is possible to see the tire temperatures while driving.
- To ensure the sensors are working properly, and the sensors are mounted correctly to the IR Box, please check it in the Info menu:
 - Turn on UniGo, go to Main menu – Info menu – IR Box info. All temperatures are now visible on the screen.

Below please see examples of the different screens.

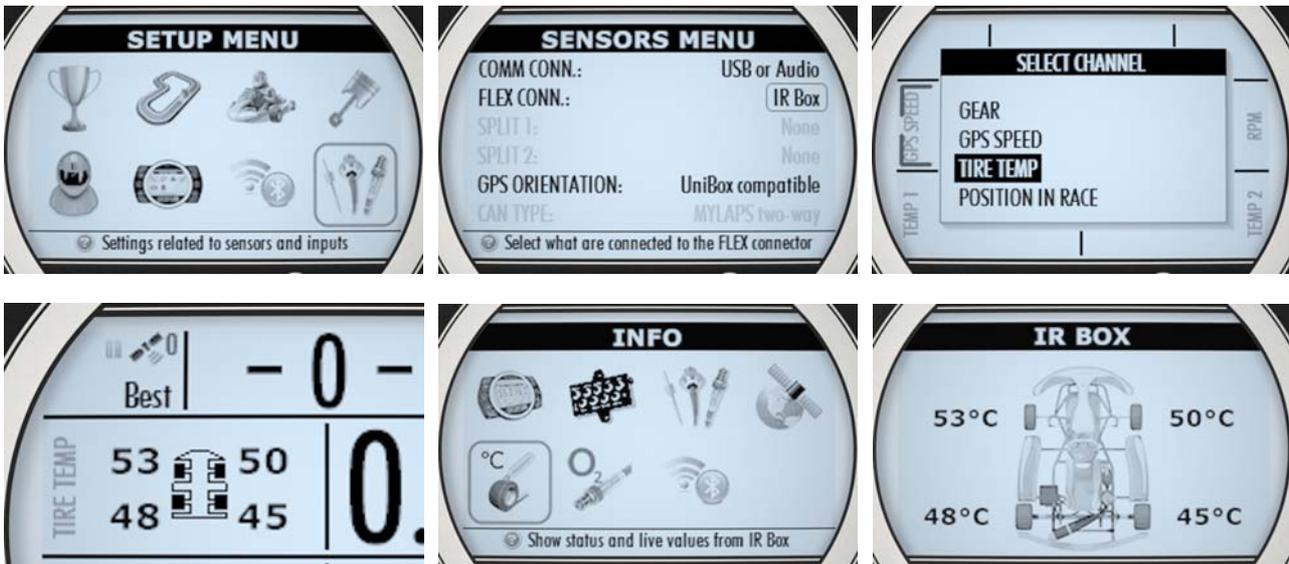

Mounting sensors:

A separate guide is included in the mounting kit.